 


JIGSAW TABLE

**YOUR BENCH AND TABLE SET IS SUPPLIED
ASSEMBLED WITH: 12 GROUND FIXING BOLTS**

JIGSAW BENCH


TOOLS REQUIRED:
17mm Spanner
10mm Masonry Bit

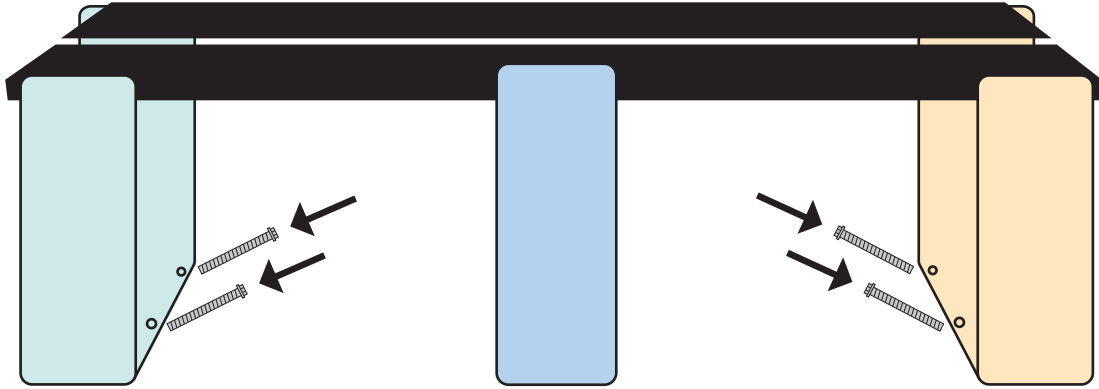

1. Use a 10mm masonry drill bit to drill a hole in the ground through the holes in the jigsaw bench ends to a depth of 130mm.
2. Screw the bolts into the holes through the jigsaw ends using a 17mm spanner.
3. Tighten with spanner to secure your bench to the ground.

JIGSAW TABLE

TOOLS REQUIRED:
17mm Spanner
10mm Masonry Bit

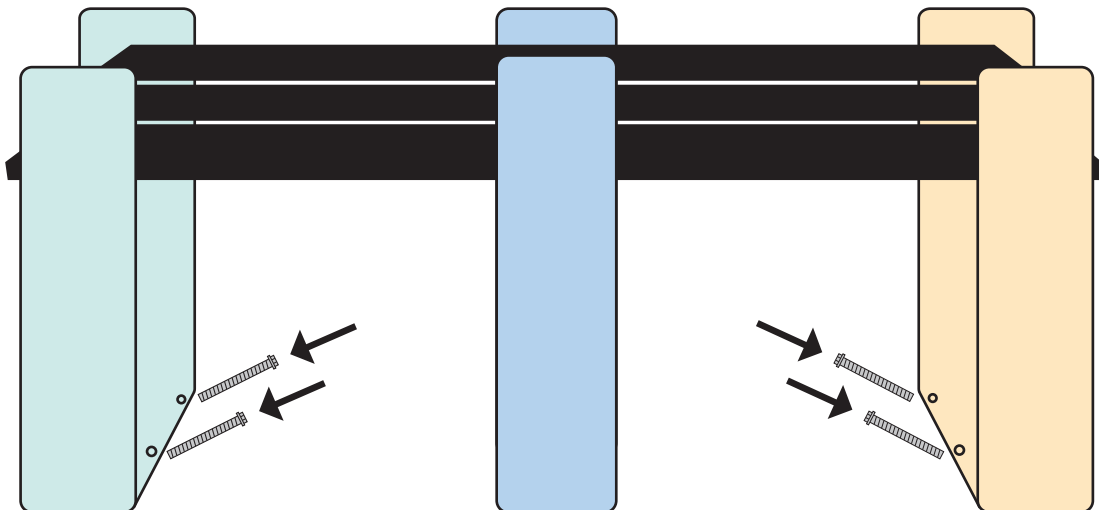

1. Use a 10mm masonry drill bit to drill a hole in the ground through the holes in the jigsaw table ends to a depth of 130mm.
2. Screw the bolts into the holes through the jigsaw table ends using a 17mm spanner.
3. Tighten with spanner to secure your table to the ground.