

Assembly Guide PPSWAV



Wall Fixed

Cherub
Page 1 of 1



Components:



x2



x4

Thread Lock Solution
Required (Not Supplied)




1. Mark hole positions on wall, then drill to manufacturers specified diameter and depth of M8 rawl bolt (See Wall Fix installation sheet)

2. Once holes are drilled insert M8 rawl bolts into holes and set in place to secure tightly.

3. Attach instrument to rawl bolts or other suitable wall anchors (**not supplied**) making sure they are tight to the wall.


Tools:

x1 TX 40 Driver Bit x1 TX 25 Driver Bit

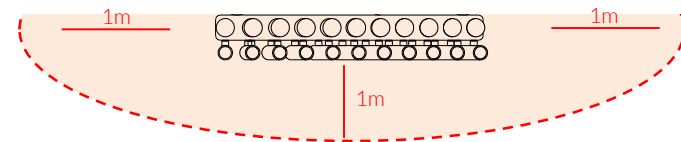

Install Instrument with 1m free space (from widest point) around it.

4. Once all mounts are fixed in place attach the beaters at each end of the instrument on directly to the wall.

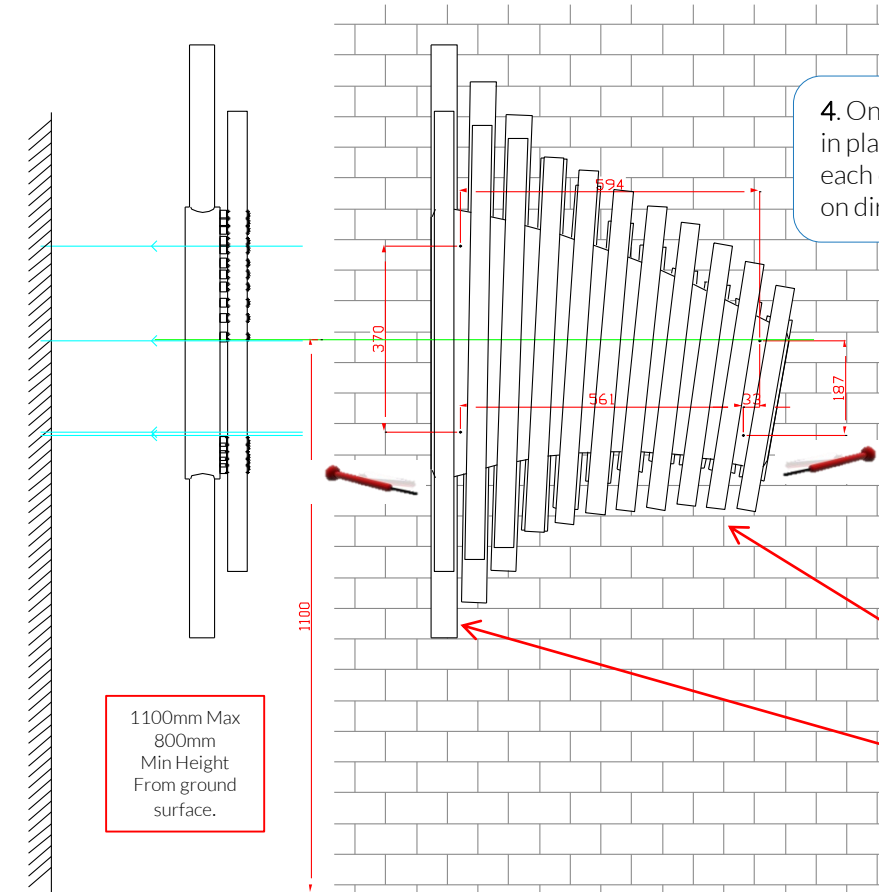

1100mm Max
800mm
Min Height
From ground
surface.



Pair Small
Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M8 Rawl Bolt



32 Kg