

Wall Fixed

Sansa Rimba Page 1 of 2



Instrument Components:

x4

M8 Nyloc Nut



M6x20 Security Screw



2 Part Cover

Сар

50

M6 Saddle Strap

Metric Conversion: 700mm/28" 850mm/33" 1.5m/59"



Installation Instructions







Weight of heaviest part 10kg (Sansa Rimba)




2. Attach Wall Fixing posts to legs (1.2) (See Ground Fix Post Installation Sheet)




4. Drill hole locations (X4) according to your chosen fixings (frame fixings, wall bolts or chemical anchors) depending of the structure of the wall. (Not Supplied)

5. Fix through Plate with suitable fixings (not supplied) in correct orientation and height for intended Key stage. Cover Fixings with 2 Part Caps supplied

6. Attach the 1 pair of beater to the saddle strap on the leg. (1.3)

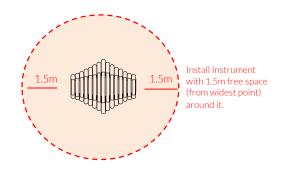

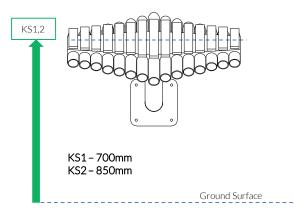



Wall Fix Components:



Wall Fixings/ Anchors not supplied

Assembly Guide PPCADE





Wall Fixed

Sansa Rimba Page 2 of 2



Instrument Components:


M8 Nyloc Nut

M6x20 Security Screw



2 Part Cover

M6 Saddle Strap

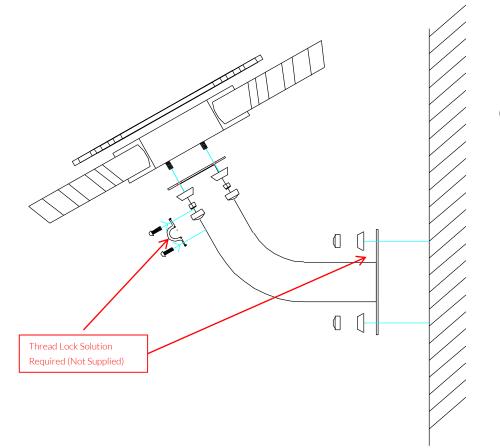


COMPONENTS LIST:



2 Part Cover Cap X8

M8 Nyloc nut X4



M6x20 Pin torx X2

Thread Lock Solution Required (Not Supplied)







