


PREMIER SEATING, TABLES AND BENCHES

**YOUR PRODUCT IS SUPPLIED ASSEMBLED WITH:
FOUR GROUND FIXING BOLTS**

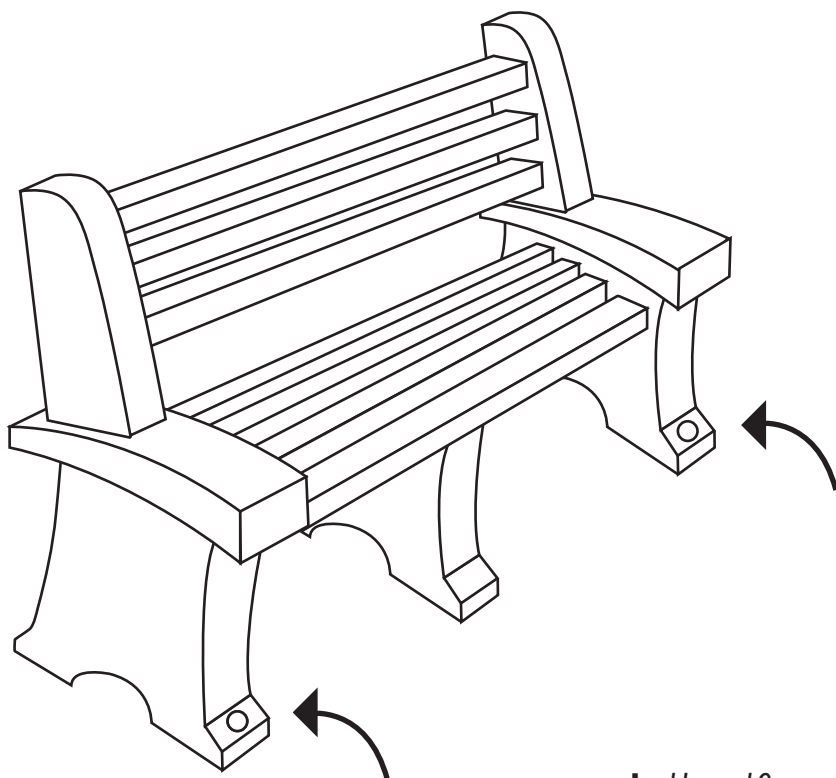


TOOLS REQUIRED:
17mm Spanner
10mm Masonry Bit

1. Use a 10mm masonry drill bit to drill a hole in the ground through the holes in the bases to a depth of 130mm.

2. Screw the bolts into the holes through the seat base using a 17mm spanner.

3. Tighten with spanner to secure your Bench to the ground.

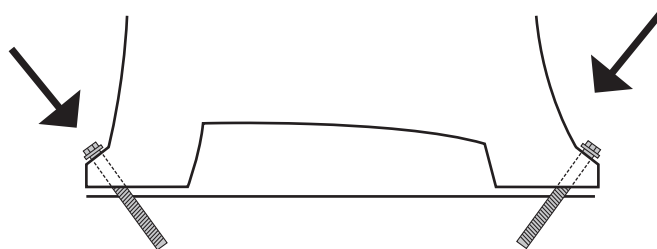

Your Bench is now secure and ready for use!!