


LEARNING CURVE/ ZIGZAG/SPIRAL

YOUR BENCH IS SUPPLIED PART-ASSEMBLED

TOOLS REQUIRED FOR GROUND FIXING:
17mm Socket
10mm Masonry Bit

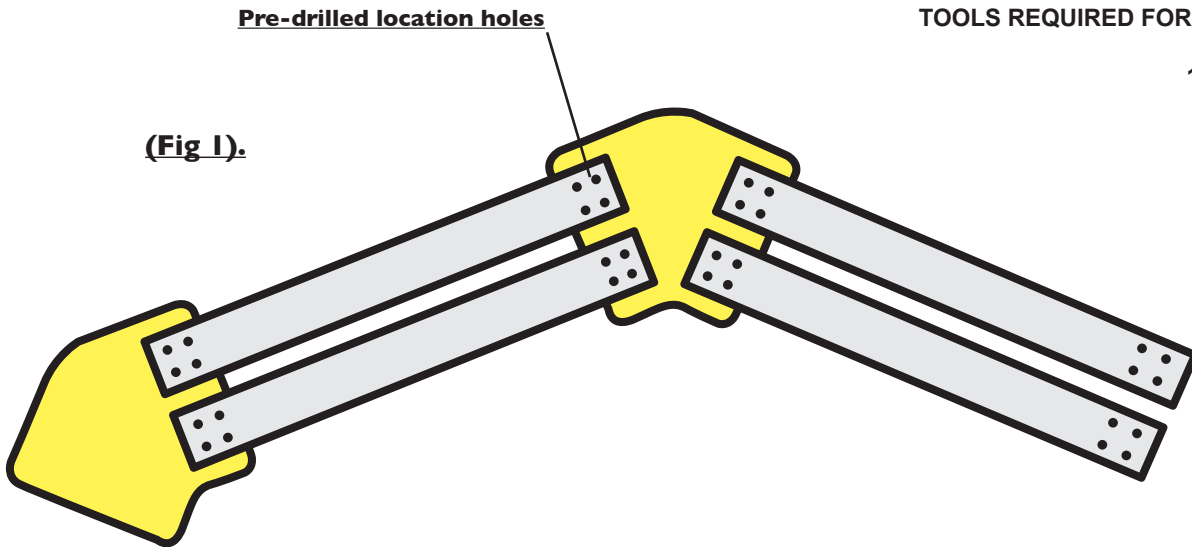

To secure Bench End Struts to Bench Box (Fig 1).

Position the Bench End Struts onto the Bench Box.


Drill a 1.0mm diameter hole into the Bench Box through the pre-drilled location holes in the struts.

Use a screwdriver to screw the black 50mm long fixing screws supplied through the bench struts and into the Bench Box.


Repeat this until all units are in place **Fig 2.**

Cover the bolt heads with the black plastic caps supplied.

(Fig 3).

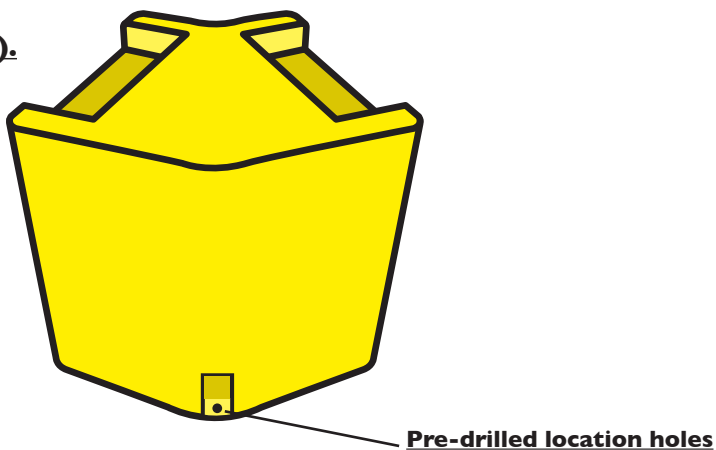

(Fig 2).

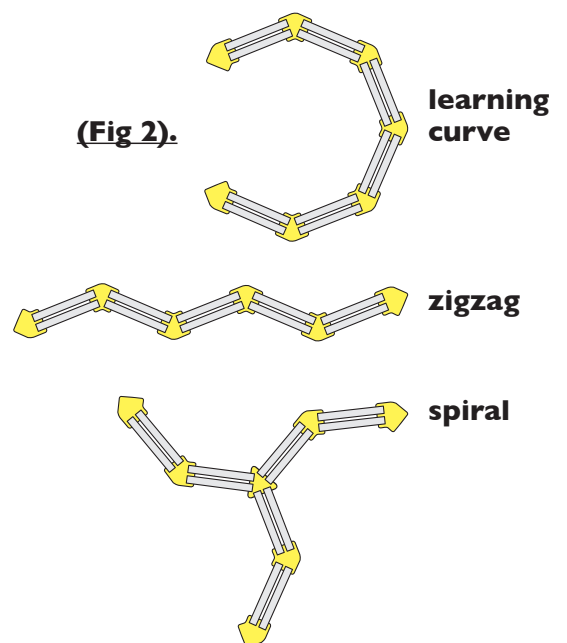

To secure the assembled unit to the ground. (Concrete, Paving, Tarmac) (Fig 3).

Use the ground-fixing bolts supplied; 1 per box, to drill and fix the products to the ground.

Drill 10mm diameter holes into the ground to a depth of 120mm and use a 17mm ratchet spanner to tighten the bolts supplied into the ground.