



Play Train Carriage

Excavation Detail

Dig all groundworks 600mm deep

Push M16 x 960mm Hex Bolt through the timbers and secure to main main uprights

T0359
Ensure timbers T0357 are positioned correctly otherwise the seat will not fit.

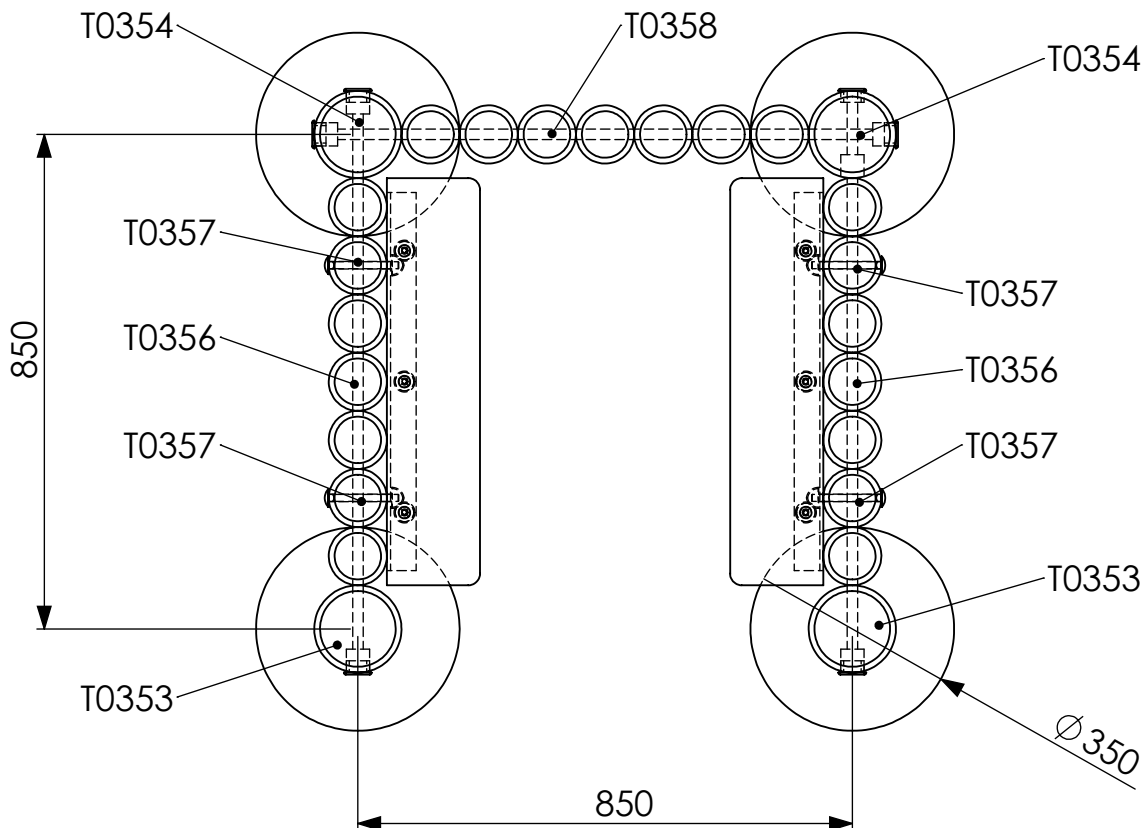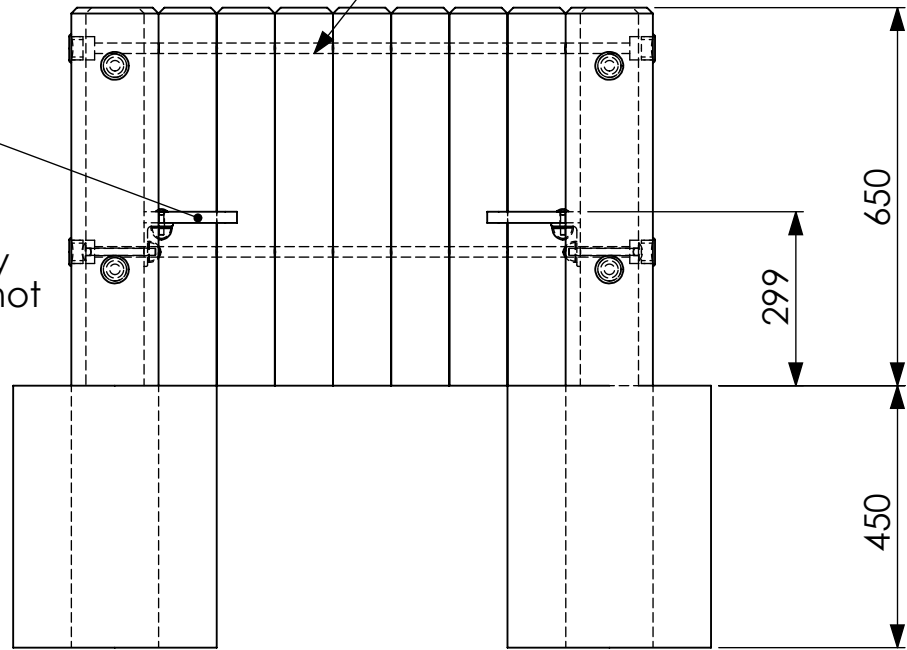

This equipment for play areas is manufactured following the codes & practice outlined in the British and European standards and in so doing meets the requirements of BSEN 1176 (general safety and test methods).