

# Installation Instructions



## Surface Fixed


Rainbow Sambas  
Page 1 of 2



### Instrument Components:

Rainbow Sambas are pre-assembled

Metric Conversion:  
80mm/ 3"  
100mm/ 4"  
230mm/ 9"  
300mm/ 12"  
400mm/ 16"  
450mm/ 18"  
1.5m/ 59"

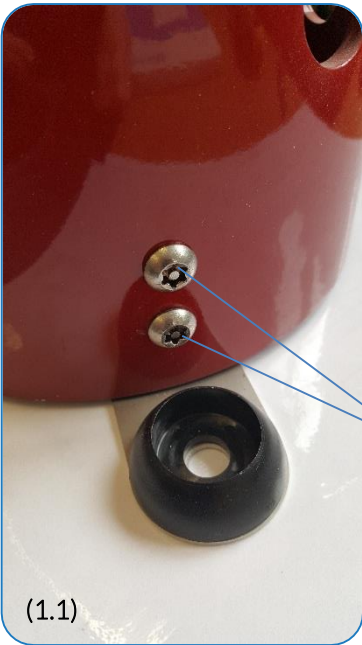

(1.1)




Weight of heaviest part 14.6kg (XL Samba)

1. Assemble fixing brackets to base of sambas using M8x25mm security screws and nyloc nuts. (1.1)( See Assembly Guide)

2. Arrange Sambas in desired location and mark holes to fix to desired surface.


3. Fix to Surface using recommended ground anchors (Ground Anchors are not supplied)

4. Make sure all fixings are covered and secure using cover caps provided

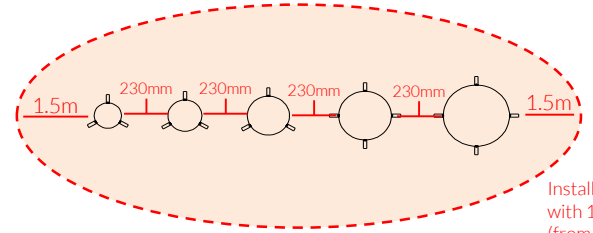

Install Instrument with 1.5m free space (from widest point) around it.

Sambas will arrive on site in pre set heights.

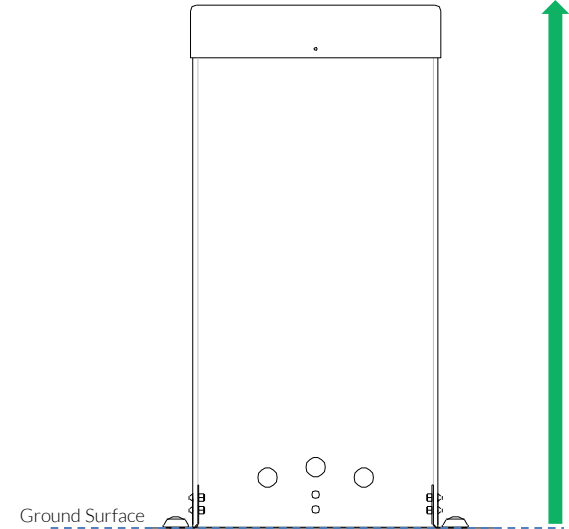

Played with hands

Ground Fix Components:




47 Kg

# Assembly Guide PPRASA




Tools:







x1  
TX 40 Driver Bit

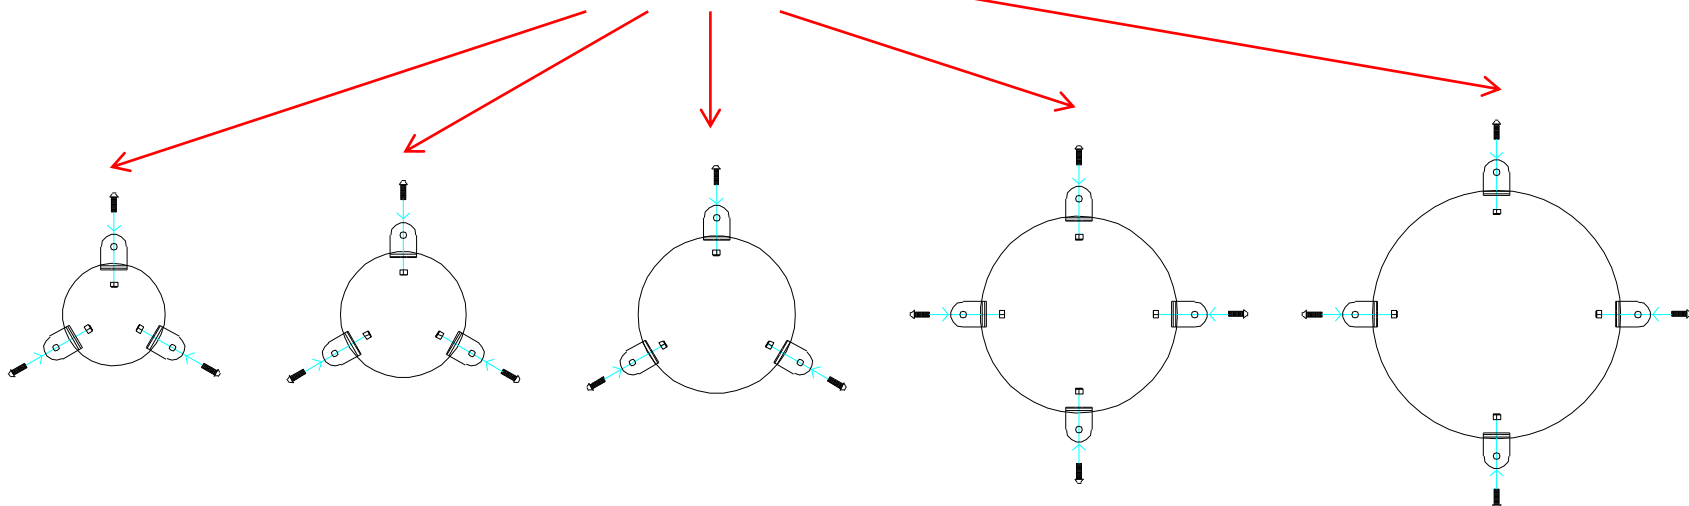Thread Lock Solution  
Required (Not Supplied)



PPRASA PLAN

COMPONENTS LIST:

-  M8x25 Pin torx X34
-  Surface Fix L Bracket X17
-  M12 2 Part black cap X17
-  M8 Nyloc nut X34

Surface Fixed  
Rainbow Sambas  
Page 2 of 2



Instrument  
Components:

Rainbow  
Sambas  
are pre-  
assembled

Thread Lock Solution  
Required (Not Supplied)




Played with hands

Ground Fix  
Components:

 x34  
 x17  
 x17  
 x34

47 Kg